



EMERGENCY SHOWERS

& EYE/FACE WASH STATIONS

Labor Protection Products For Workers, Necessary To Ensure
The Safety Of Workers.

COMPANY INTRODUCTION

Wenzhou Lailisi Shoes Co., Ltd. was established in 1994, is a professional production enterprise of labor protection products integrating scientific research, development, quality control, manufacturing and marketing. And safety and protective equipment was established in 2003, began to expand the research and development of various types of security products were established so far, with advanced professional quality testing equipment and production management, to ensure their own rapid and stable development, not only was elected to the China Labor Protection Professional Committee member units, the State Economic and Trade Commission issued a production license designated manufacturers, members of the China Textile Trade Association and consumers preferred well-known brands, and at the same time At the same time, we have won many awards, such as "China Quality Miles Quality and Integrity Commitment Member Unit", "China Quality and Service Reliable Reputation Brand", "Excellent Exhibitor in the First National Safety Production and Technical Equipment Exhibition", and so on. Lailisi always adheres to the brand concept of "people-oriented, quality-based, integrity to win the market, and actively create a good internal environment", and maximizes the staff's ingenuity and enthusiasm, so that the enterprise maintains upward vitality. The pursuit of excellence is the consistent entrepreneurial spirit of Lailisi, and leading forever is the goal of Lailisi' sustainable development! The company is looking forward to cooperating with more and more friends at home and abroad to create a more brilliant tomorrow!



CONTENT

STAINLESS STEEL EMERGENCY EYEWASH 01

AUTOMATIC EVACUATION OF ANTI-FREEZE EYEWASH 04

STAINLESS STEEL WALL MOUNTED EYEWASH 05

PORTABLE HANGERBOARD EYEWASH KIT 06

PORTABLE EYEWASH STATION 08


PORTABLE GRAVITY-FED EYEWASH STATION 09



EMERGENCY EYE WASH ROOM 13

OILY WASTE TANKS 16

EYEWASH ACCESSORIES 17

Composite Emergency Shower Eyewash

- **Material:** stainless steel/stainless steel ABS coated
 - **Surface Finish:** Fine Polished/High Gloss Epoxy Coating
 - **Shower:** stainless steel inlet pipe (48mm), ball valve switch, round bar puller (6mm diameter) and shower head
 - **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
 - **Eyewash:** stainless steel nozzle, built-in pp filter, filtering debris in the water
 - **Top spray:** Spinning crimped public art design, diameter 250mm
 - **Pipe diameter:** 38mm
 - **Nominal pressure:** 1.0Mpa
 - **Working pressure:** 0.2~0.4Mpa
 - **Test pressure:** 1.5Mpa
 - **Spray water flow:** $\geq 76\text{L/min}$
 - **Face and eye wash water flow:** $\geq 11.4\text{L/min}$
- 

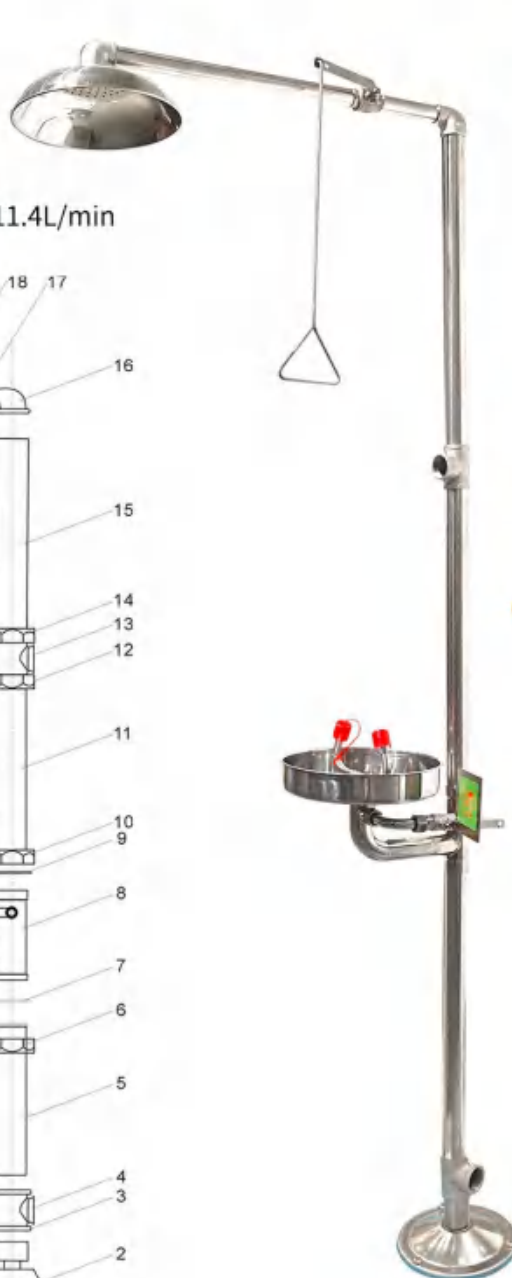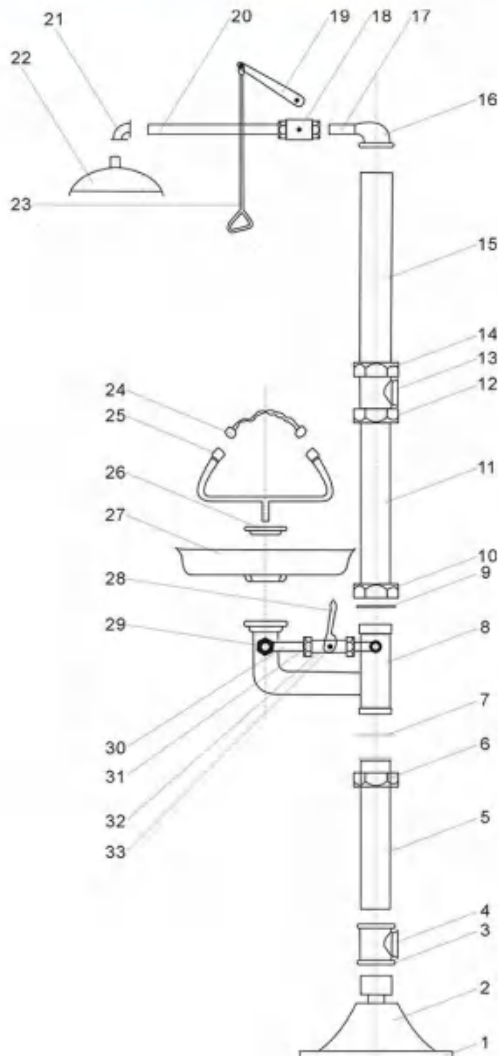

Optional pedals and colors

6610

6610-B

Emergency Vertical eyewash

Vertical stainless steel eyewash station

- **Material:** stainless steel/stainless steel ABS coated
- **Surface Finish:** Fine Polished/High Gloss Epoxy Coating
- **Eyewash:** stainless steel nozzle, built-in pp filter, filtering debris in the water
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$



6620




6620-B

Open the lid and let out the water

- **Material:** stainless steel/stainless steel ABS coated
- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- **Material:** stainless steel/stainless steel ABS coated
- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Eyewash:** Adjustable flow rate eyewash nozzles
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Spray water flow:** $\geq 76\text{L/min}$
- **Working pressure:** 0.2~0.4Mpa
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$

序号	名称
1	底 sump 盘
2	排水三通 Drainage Tee
3	下接管 Connecting Pipe
4	总 Assembly 成
5	进水短节 Water Intake Short Section
6	压紧螺母 Compression Nut
7	洗眼阀门 Eye wash valve
8	阀门摆杆 Valve pendulum
9	摆杆连接架 pendulum link frame
10	接水盘 Watering Can
11	接水盘固定螺母 Catch pan fixing nut
12	水流调节阀体 Water flow control valve body
13	洗眼喷头 Eye Wash Nozzle


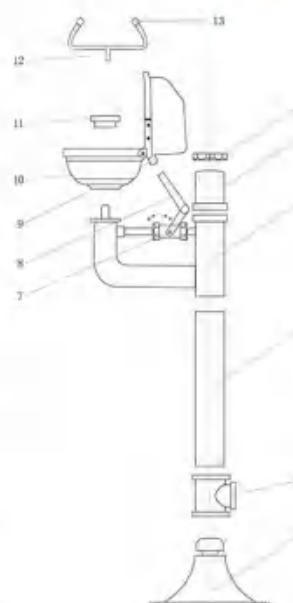


6620-A

Composite Emergency Eyewash

- **Material:** stainless steel/stainless steel ABS coated
- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Shower:** stainless steel inlet pipe (48mm), ball valve switch, round bar puller (6mm diameter) and shower head
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- **Eyewash:** Adjustable flow rate eyewash nozzles
- **Top spray:** Spinning crimped public art design, diameter 250mm
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Spray water flow:** $\geq 76\text{L/min}$
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$

序号	部 件 名 称	规 格
1	底盘-ump	
2	排水三通-Drain Tee	1, 1/4"
3	下接管-standpipe	1, 1/4" 内接螺
4	洗眼总成-Eye wash assembly	
5	中接管-intermediate water pipe	$\phi 42$
6	连接螺母-coupling nut	M42X2
7	四氟垫片-PTFE gasket	
8	进口三通-Inlet Tee	1, 1/4"
9	四氟垫片-PTFE gasket	
10	连接螺母-coupling nut	M42X2
11	上接管-upper pipe	$\phi 42$
12	异径弯头-Reducing elbow	1, 1/4" - 3/4"
13	冲淋阀门-Shower Valve	
14	阀门摇臂-Valve rocker arm	
15	冲淋阀门拉手-Shower Valve Handle	+3/4"
16	冲淋进水管-Shower inlet pipe	+3/4"
17	弯头-bends	
18	冲淋喷头-shower head	
19	洗眼阀门螺母-Eye wash valve nut	2-M30X2
20	洗眼阀门-Eye wash valve	
21	阀门扳手螺母-Valve Wrench Nut	
22	连接杆-connection bar	
23	接水盆-water basin	
24	接水盆盖-catch basin cover	
25	接水盆固定螺母-Catch basin fixing nut	
26	水流调节阀-Water Flow Control Valve	
27	喷头-spray-head	

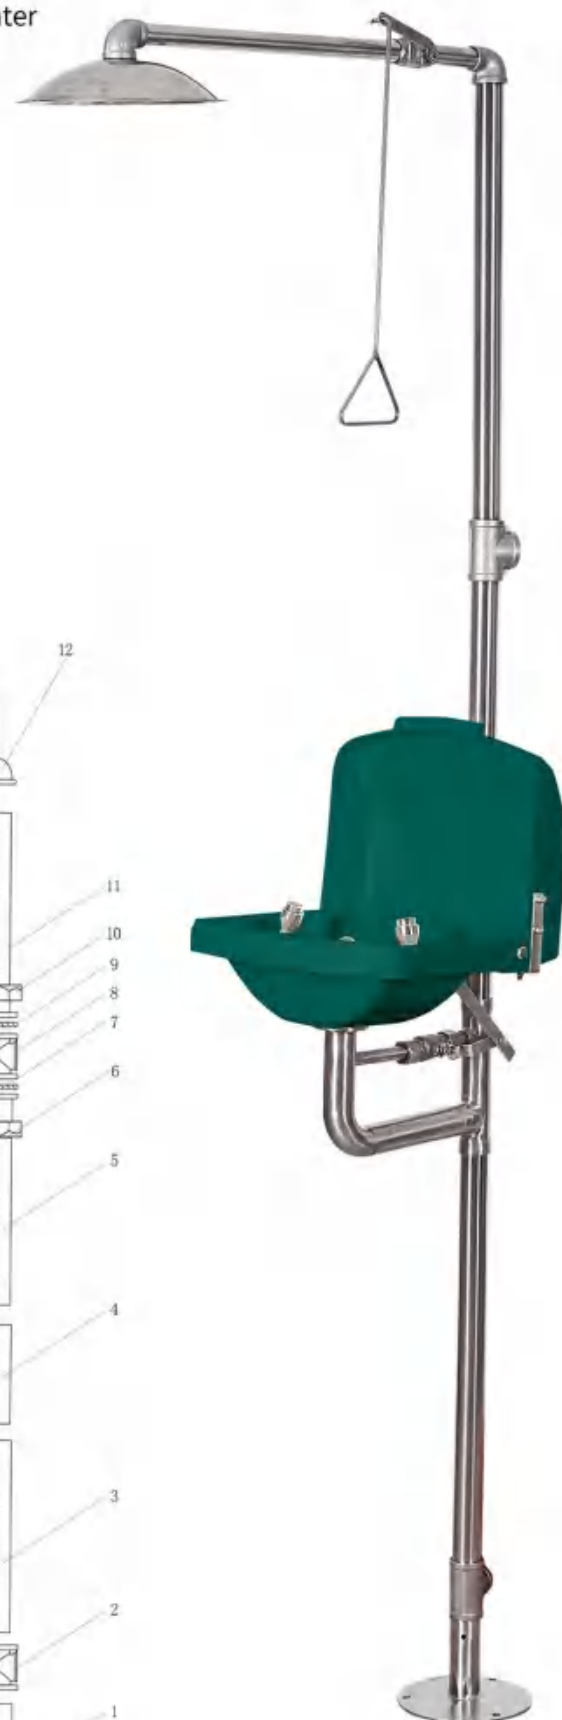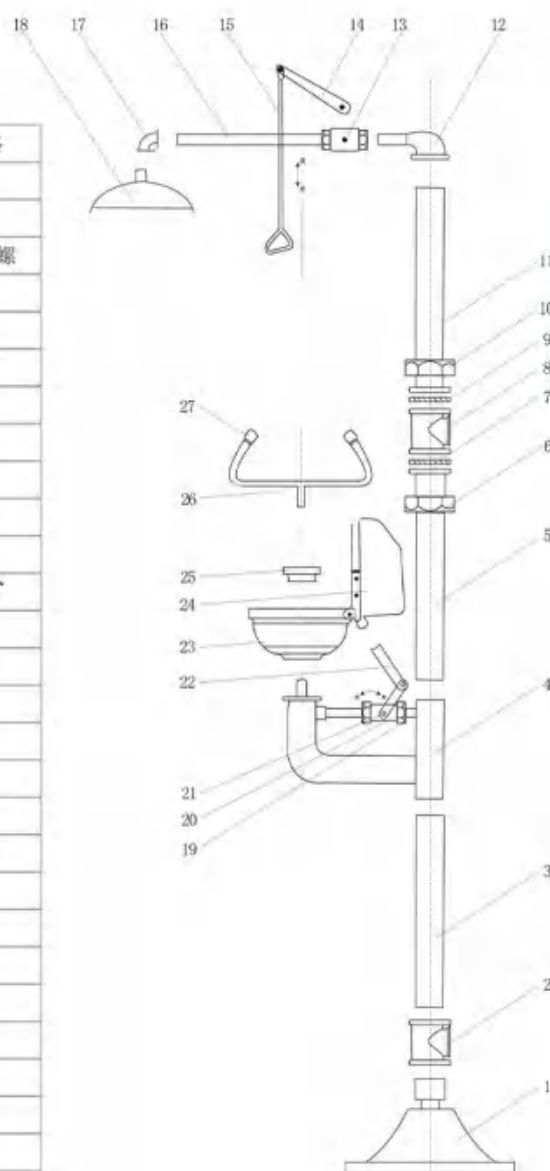


6610-A

Automatic Evacuation Of Anti-Freeze Eyewash

- **Material:** stainless steel/stainless steel ABS coated
- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Shower:** stainless steel inlet pipe (48mm), ball valve switch, round bar puller (6mm diameter) and shower head
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- **Eyewash:** Adjustable flow rate eyewash nozzles
- **Top spray:** Spinning crimped public art design, diameter 250mm
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Spray water flow:** $\geq 76\text{L/min}$
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$

序号	部 件 名 称	规 格
1	底座-pedestals	
2	出水口-drainage outlet	
3	进水短节-water intake short section 1.1/4"	
4	进水口-water inlet 1.1/4" 外接螺纹	
5	洗眼阀门连接杆-Eye wash valve connecting rod	
6	接水盆-Catch basin 695X425X30 (mm)	
7	接水盆固定阀体 Fixed valve body of water catchpot1130X460X40 (mm)	
8	洗眼总成-Eye wash assembly	
9	洗眼阀门-Eye wash valve	
10	水管-Water pipes	
11	连接管-connection tube	
12	水管-Water pipes	
13	异径弯头1.1/4(英制)-Reducing Elbow 1.1/4 (Fractional)	
14	冲淋短接管1.1/4x630 (mm)-Shower short tube 1.1/4x630 (mm)	
15	冲淋阀门-Shower Valve	
16	冲淋阀门手柄-Shower Valve Handle	
17	手柄拉杆-handle bar	
18	冲淋长接管-Flushing long tube	
19	弯头+3/4''-Elbow + 3/4''	
20	冲淋喷头-sprinkler head	
21	洗眼龙头-Eyewash faucet	
22	水流调节阀-Water Flow Control Valve	

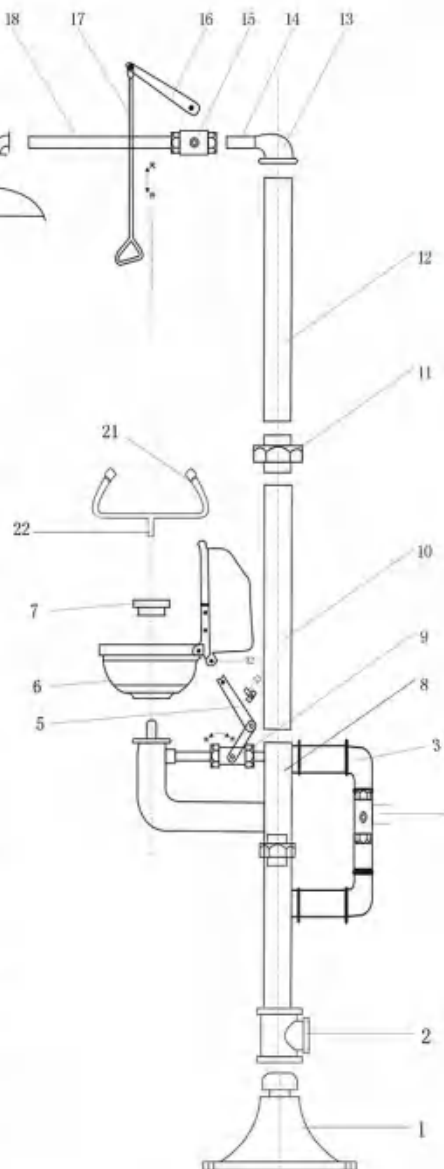

6610-AZ

Wall Mounted Eyewash Station

- Narrow workspace and laboratory more need to improve the utilization of space, wall-mounted eyewash does not take up floor space, easy to use, convenient
- **Spray nozzle:** flush eyewash nozzle water flow is sufficient, easy to install, save the use of space
- **Piping:** The main piping is made of stainless steel to ensure the sturdiness and quality of the product and resistance to corrosion
- **Switches:** Placards with operation diagrams and written instructions are placed near the hand-pull switches for easy use.



6611

- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- **Material:** stainless steel/stainless steel ABS coated
- **Dust cover:** ABS dust cover / open the lid to wash the eyes out of the water
- **Eyewash:** Adjustable flow rate eyewash nozzles
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Spray water flow:** $\geq 76\text{L/min}$
- **Working pressure:** 0.2~0.4Mpa
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$



6640-A

- **Material:** stainless steel/stainless steel ABS coated
- **Eyewash basin:** stainless steel basin, faucet is stainless steel, corrosion resistance, easy installation
- **Coating:** High brightness epoxy resin coating, effective resistance to chemical corrosion and ultraviolet radiation
- **Spray nozzle:** water outlet holes are treated with a special reducer to make the outflow more gentle and adequate
- **Switches:** Placards with operating diagrams and written instructions are placed near the manual switches for easy use.



6640-C



6640

PORTABLE HANGERBOARD EYEWASH KIT

WALL MOUNTED EYEWASH

- **Eyewash material:** New non-toxic polyethylene
- **Color:** green/Customizable
- **Features:** portable and compact, not limited by the environment
- **Volume:** 500ml*2
- **Solution:** 0.9% sterile sodium chloride solution
- **First aid kit included:** iodine; alcohol tablets; sterile gauze; bandages; safety pins; adhesive tape; disposable towels; band-aids; triangular bandages; scissors; tweezers; disposable tourniquets
- **Three caps to choose from**
- **Eyewash size:** L*W*H=60*55*87cm

Remarks: The solution is a sterile product, the remaining solution in the bottle must be poured out after use with the cap open and may not be reused. Use the device only as an emergency treatment, in serious cases need to be treated and then must immediately seek medical attention.



6680



6670-A



6670-X



6670

WALL MOUNTED EYEWASH

- **Material:** New non-toxic polyethylene
- **Color:** plating/customizable
- **Characteristics:** Portable and compact, regardless of the environment
- **Volume:** 500ml*2
- **Suggest using clean water**
- Need to replace the water stored in the bottle regularly, the recommended replacement cycle of 7 days
- **Three types of lids to choose from**
- **Eyewash size:** L*W*H=30*26.7*9CM
- Remarks: Skin rinse eyewash bottles, as an emergency treatment only, must seek medical attention immediately after treatment

PORTABLE EYEWASH STATION

0.9% STERILE SODIUM CHLORIDE SOLUTION


- 0.9% sterile sodium chloride solution Eye and skin rinses
- The 0.9% sterile sodium chloride solution contained is comparable to the body's natural eye solution. It is mainly suitable for the rinsing of dust, dirt and foreign matter, and the continuation of other chemical substances after the use of acid and alkali neutralizing eye wash.
- **Volume:** 500ML



1. Turn the cap to open the inner seal

4.9% STERILE PHOSPHATE BUFFER

- Acid and base neutralizing eye and skin rinses
- The included 4.9% sterile phosphate buffer synthesizes acid-base solutions quickly and effectively. It has been proven to be both safe and effective. This eyewash quickly neutralizes acid and alkaline solutions without causing any harm to the eyes.
- **Volume:** 500ML

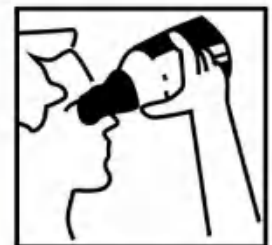

2. Tilt your head and start rinsing

6680-D



6670-D

WALL MOUNTED EYEWASH

- **Material:** New non-toxic polyethylene
- **Color:** white/customizable
- **Characteristics:** Portable and compact, regardless of the environment
- **Volume:** 500ml
- **Suggest using purified water**
- **Note:** The skin and eye wash bottle is only for emergency treatment and must be immediately treated with medical attention

PORTABLE EYEWASH STATION

WALL MOUNTED EYEWASH

- **Eyewash material:** New non-toxic polyethylene
- **Color:** green/Customizable
- **Features:** Portable and compact, regardless of the environment
- **Volume:** 500ml*2
- **Plain water/facial cleanser recommended**
- **Need to replace the water stored in the bottle regularly, the recommended replacement cycle of 7 days**
- **Three caps to choose from**
- **Eyewash size:** L*W*H=51*29.3*12CM
- **Wastewater box size:** L*W*H=60*55*87cm

Remarks: Skin rinse eyewash bottles, as an emergency treatment only, must seek medical attention immediately after treatment



6680-A



1902-A



1902

FAUCET TYPE EYEWASH

- **Material:** The main body is made of copper with nickel and chrome plating on the surface.
- **Color:** plating/customizable
- **Characteristics:** portable and compact, not limited by the environment
- **Faucet can be rotated 360°**
- **Nominal pressure:** 0.2Mpa
- **Sealing pressure:** 0.45Mpa
- **Working pressure:** 0.2-0.4Mpa
- **Flow rate L/min :** ≥ 11.4
- **Size:** L*W*H=22*16*7CM



PORTABLE GRAVITY-FED EYEWASH STATION

WALL MOUNTED MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** No installation required, no environmental restrictions
- **Volume:** 14 gallons (53L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=66*51*24cm



6650

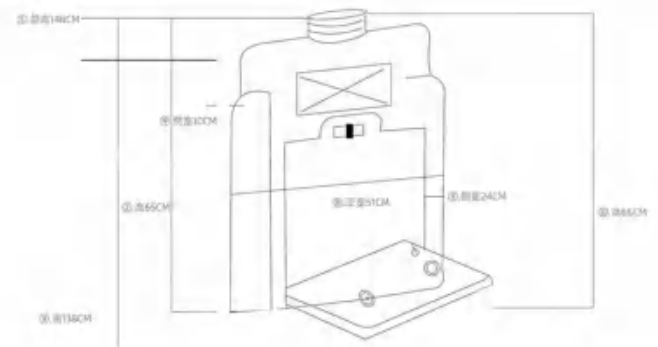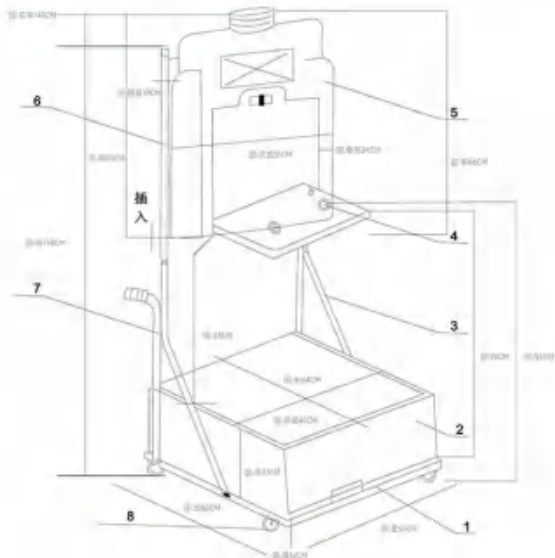

TROLLEY MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** Designated position can be moved at any time
- **Volume:** 14 gallons (53L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=66*51*24cm
- **Wastewater box size:** L*W*H=60*55*87cm

Remarks: need to replace the water stored in the tank regularly the replacement cycle is 7 days.



6650-1

PORTABLE GRAVITY-FED EYEWASH STATION

WALL MOUNTED MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** No installation required, no environmental restrictions
- **Volume:** 9 gallons (35L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=58*28*38cm



6690



TROLLEY MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** Designated position can be moved at any time
- **Volume:** 14 gallons (53L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=58*28*38cm
- **Wastewater box size:** L*W*H=80*50*52cm

Remarks: need to replace the water stored in the tank regularly the replacement cycle is 7 days.

6690-1

PORTABLE GRAVITY-FED EYEWASH STATION

WALL MOUNTED MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** Spray guns can be used to flush specified locations
- **Volume:** 14 gallons (53L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=66*51*24cm



PQ6650



TROLLEY MODEL

- **Eyewash material:** new non-toxic ABS
- **Color:** yellow/green
- **Features:** Waste water frame capacity 70L, waste water utilisation is environmentally friendly and easy to move.
- **Volume:** 14 gallons (53L)
- **Temperature of using water source:** 0~40°C
- **Use time:** ≥15min
- **Eyewash water flow:** ≥1.5L/min
- **Eyewash size:** L*W*H=66*51*24cm
- **Wastewater box size:** L*W*H=60*55*87cm

Remarks: need to replace the water stored in the tank regularly the replacement cycle is 7 days.

PQ6650-1

PORTABLE GRAVITY-FED EYEWASH STATION

WITH MOBILE WASTE CART

- **Eyewash material:** new non-toxic ABS
 - **Color:** yellow/green
 - **Features:** Waste water tank capacity of 100L, waste water utilization is environmentally friendly and easy to move
 - **Features:** Spray guns can be used to flush specified locations
 - **Volume:** 14 gallons (53L)
 - **Temperature of using water source:** 0~40°C
 - **Use time:** ≥15min
 - **Eyewash water flow:** ≥1.5L/min
 - **Eyewash size:** L*W*H=50.5*28.5*67cm
 - **Wastewater box size:** L*W*H=60*55*87cm
- Remarks:** need to replace the water stored in the tank regularly the replacement cycle is 7 days.



6650-A



PQ6650-A

Composite Drenching Eye Wash Room

COMPOSITE ACRYLIC DRENCHING EYE WASH ROOM

- **Material:** highly lighted acrylic plate + stainless steel
- **Color:** Customizable
- **Features:** disassembled and assembled, easy to move
- **Shower:** stainless steel inlet pipe (48mm), ball valve switch, round bar puller (6mm diameter) and shower head
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- **Top spray:** Spinning crimped public art design, diameter 250mm
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Spray water flow:** $\geq 76\text{L/min}$
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$



6910-Y

Composite Drenching Eye Wash Room

COMPOSITE ENCLOSED DRENCHING EYE WASH ROOM

- **Material:** highly lighted acrylic plate + stainless steel
- **Color:** Customizable
- **Features:** disassembled and assembled, easy to move
- **Shower:** stainless steel inlet pipe (48mm), ball valve switch, round bar puller (6mm diameter) and shower head
- **Working pressure:** 0.2~0.4Mpa
- **Test pressure:** 1.5Mpa
- **Face and eye wash water flow:** $\geq 11.4\text{L/min}$
- **Eyewash:** stainless steel inlet pipe (48mm), ball valve switch and eyewash basin
- The back wall of the center of the shower room is equipped with a G1¼ water inlet; the lower part of the room is equipped with a G1¼ drain port to prevent the outflow of sewage from the eyewash and spray shower.
- **Pipe diameter:** 38mm
- **Nominal pressure:** 1.0Mpa
- **Spray water flow:** $\geq 76\text{L/min}$



6910-B

Composite Drenching Eye Wash Room

EMERGENCY EYE WASH ROOM WITH WATER STORAGE

- The main function of the emergency system of vertical water storage type eyewash station: in the case of water cutoff of the eyewash water supply system, the eyewash can be used normally. The design of the whole set of devices meets the requirements of ANSI Z358.1-2009 EMERGENCY EYEWASH AND SHOWER, DIN EN 15154-1:2006, DIN EN 15154-2:2006, DIN 12899-3:2009 and Eagle and Beast eyewash manufacturing standards. Connected to the factory tap water, relying on the storage tank to supply water to the eyewash, can be connected to the eyewash to use. Translated with www.DeepL.com/Translator (free version)

- **Material:** stainless steel
- **Color:** Customizable
- **Product Features:**
In the event of a water cutoff in the eyewash water supply system, the eyewash can be used normally
- **Water storage device capacity:** 1000L
- Equipped with intelligent hot and cold machine to regulate the water temperature
- **Customizable options:** color, material, external dimensions, thermostat size (heating & cooling), level gauge, inlet booster pump, effluent discharge pump, explosion-proof protection, automatic water inlet and outlet, audible and visual alarms, foot barriers, emergency bars, heating elements, induction sensors, flashing lights, anti-bacterial fluids, back/side panels, sunshade, catchment area (catchment drain: 2-inch hose connector), and under-tank flashing lights.



HAZARDOUS WASTE SAFETY STATION

EMERGENCY DECONTAMINATION AND DECONTAMINATION SPRAYER

- **Eyewash material:** aluminum alloy
- **Driving pressure:** 3~7 bar
- **Flow rate of water belt:** 20 L/Min
- **Height of water belt:** 2.4 meters
- **Total three-dimensional height:** about 2.56 meters
- **Iron box size:** L*W*H=0.9*0.74*0.08
- **Gross weight:** 20KG



6660

OILY WASTE TANKS

- **Model:** 8001-6 | 8002-14
- **Material:** galvanized steel
- Eye-catching warning labels for on-site management and differentiation
- Foot-operated switch control, work to free your hands, the upper limit of the bucket lid opening angle of 60 degrees under the state of force, no external force is automatically in a completely closed state.
- Eyelets in the base promote air circulation around the tank for effective heat dissipation
- Carrying handle design for easy transportation
- Self-closing lid design, without external force automatically in a completely closed state, isolating the external oxygen supply so that the combustion can not be continued.
- Cylinder structure and elevated barrel bottom design, so that the air flow along the body, to play a heat dissipation, moisture to avoid rusting effect

COLOUR DIFFERENTIATION OF VARIOUS HAZARDOUS MATERIALS



EYEWASH ACCESSORIES



EYE WASH NOZZLE



COMPLETE SET OF
BULLHORN NOZZLES



SPRINKLER HEAD



EYE WASH ASSEMBLY



EYE WASH VALVE



SHOWER VALVE



DN32*20
SPRINKLER HEAD



DN/32



STAINLESS STEEL TIE RODS



EYEWASH STATION BASE



BASINS

EYE WASH & SHOWER ACCESSORIES

Colour: primary/yellow

Eagle Eye Safety offers a wide range of replacement parts and accessories to ensure your eye and face wash maintains optimal performance levels. Accessories include for gravity-fed eye washes, replacement bowls, inspection records and more.

Protection and maintenance

- Trial once a week (shower rod and eyewash push plate), ensure pipe water flow;
- Eyewash and shower spray cleaning once a week, prevent the dust blocking the eyewash and shower ;
- According to the standard check once a year, if the eye head or shower nozzle do not flow water, please check the eyewash nozzle hole is blocked by impurities, if so please use the Needle - thin rod cleaning.

Matters needing attention

- The installation site and work areas should be highly at the same level, avoid layout of up and down;
- Ensure the device in less than 10 seconds to walk distance from the danger zone , ensure that there is no obstacle, and the line preferably straight from dangerous work area to the device ;
- Ensure no obstacles in the shower water center within Ø450mm
- Cleaning eyes and face at least 10 to 15 minutes continuously;
- After use, please get rod and push plate to push back;
- After use, please timely treatment, so as to avoid the formation of frozen puddles or freezes when the temperature is low to prevent user from slipping after use.

Suggestions

- The products are used in case of emergency, temporary slowing further against the harmful substances on the body, further treatment need to follow the doctor's instructions:
- Recommend the use of the domestic water, is best to use warm water, but the water temperature should not be too high so as not to accelerate the chemical reaction and accidents:
- Before using the device, training employees correctly to use it

We reserve the right to change the product specification without notice



+8615158761736 +8615067806059



287961317@qq.com 597998093@qq.com



No. 268 Chongde Road, Fengmen Street, Lucheng District, Wenzhou City,
Zhejiang Province, China